RAINBOWAIR®

AUTO KIT INSTRUCTIONS

For Use with Rainbowair® Activator Series II Ozone Generators


The Rainbowair Auto Kit allows ozone to be directed into vehicles and other enclosed spaces while the ozone generator remains outside of the treatment area. This improves ozone distribution, helps keep the generator in a clean, dry environment, and provides greater flexibility for targeted ozone applications.

COMPATIBLE MODELS

ACTIVATOR 250	ACTIVATOR 500	ACTIVATOR 1000	ACTIVATOR 2000
(5210-II)	(5200-II)	(5401-II)	(5600-II)

⚠ IMPORTANT ⚠

USE OZONE IN UNOCCUPIED AREAS AND IN ACCORDANCE WITH APPLICABLE FOOD SAFETY PROCEDURES AND REGULATIONS. VENTILATE THOROUGHLY BEFORE RE-ENTRY. REMOVE THE SOURCE OF THE ODOR WHENEVER POSSIBLE FOR BEST RESULTS.

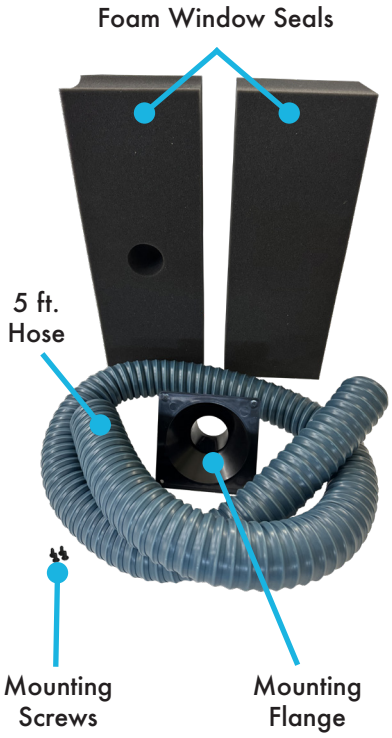

SINGLE AUTO KIT CONTENTS

ACTIVATOR 250, 500 & 1000

- Mounting Flange
- 5 ft. Hose
- Foam Window Seals (2)
- Mounting Screws (4)
- Instruction Sheet

DUAL AUTO KIT CONTENTS

ACTIVATOR 2000

- Mounting Flange (2)
- 5 ft. Hose (2)
- Foam Window Seals (4)
- Mounting Screws (8)
- Instruction Sheet

INSTALLATION

STEP 1. Position the generator outside the treatment area on a stable, dry surface.

STEP 2. Attach the supplied flange(s) using the provided screws.

STEP 3. Place the foam into a partially opened window or opening and seal any remaining gaps with the additional foam block(s) supplied.

STEP 4. Connect the hose(s) to the flange(s).

STEP 5. Insert the hose through the foam block.

STEP 6. Set the output and treatment time using the Vehicle Treatment Chart on page 2.

VEHICLE TREATMENT CHART

Recommended Output & Treatment Times

Follow the steps below to find the output dial setting and treatment time based on vehicly type and odor level. Results may vary depending on temperature, humidity, and the source of the odor.

STEP 1. Find the vehicle type to choose a dial setting.

Cars & Small SUVs	Large SUVs, Pickups & Minivans	Full-Size & Passenger Vans
Use the lowest dial number shown	Use a middle dial number	Use the highest dial number shown

STEP 2. Find the odor level and Activator, then set the dial and timer.

	SINGLE AUTO KIT			DUAL AUTO KIT
ODOR LEVEL	**ACTIVATOR 250**	**ACTIVATOR 500**	**ACTIVATOR 1000**	**ACTIVATOR 2000**
Light Stale air & food odors	**Dial 1-4** 15 min	**Dial 1-2** 15 min	**Dial 1** 15 min*	**Dial 1** 15 min*
Moderate Pet & musty odors, light smoke	**Dial 2-7** 30 min	**Dial 1-4** 30 min	**Dial 1-2** 30 min*	**Dial 1-4** 30 min*
Severe Heavy smoke & long-term odors	**Dial 2-7** 60 min	**Dial 1-4** 60 min	**Dial 1-2** 60 min	**Dial 1-2** 60 min

* **Activator 1000 & 2000:** 1 hour is the minimum timer position. For shorter times, use the manual ON position, track the time separately, then turn the unit off.

BEFORE TREATMENT

- Clean the vehicle and remove air fresheners first.
- Make sure people and pets are out of the vehicle.
- **Dual Auto Kit:** Output splits evenly between two vehicles. Set for the larger vehicle.

DURING & AFTER TREATMENT

- For treatments 30 minutes or less, run the vehicle outdoors with the fan on to help circulate ozone through the air system.
- Keep the vehicle closed for at least 1 hour after treatment, then allow it to air out before re-entry.
- Letting the vehicle sit in the sun after treatment may help bring out deeply embedded odors.
- If odors persist upon re-entry, repeat the treatment.

QUEENAIRE® TECHNOLOGIES

NEED ASSISTANCE?

Give us a call at 1-877-646-9663 or email us at info@queenaire.com.