

Hydroxyl Generator Air Treatment System



HG2500 User Manual

IMPORTANT SAFETY INSTRUCTIONS

Carefully read the important safety and maintenance information.

Keep these instructions for future reference.

These instructions contain important safety and operating information for your Newaire HG2500 Hydroxyl Generator. Please contact us directly with questions you may have regarding the safe operation and/or maintenance.

Toll Free #: 1-877-646-9663

Table of Contents

Important Safety Information	2
Handling and Disposal of Mercury	
FAQs	
Location of Controls	
Operation	
Replacing the Carbon Filters	
Replacing the UV Bulbs	9
Cleaning	11
Replacement Parts	
Specifications	12
Troubleshooting	12
Limited Warranty	

Important Safety Information



DANGEROUS VOLTAGE: The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this product.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

WARNING: Use this Hydroxyl Generator only for its intended purpose as described in this Owner's Manual.

FCC WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: DO NOT look directly at UV bulbs.

INDUSTRY CANADA NOTICE:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference, and
- 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

Important Safety Information

Standard safety precautions must always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- 1. Read these Instructions.
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all Instructions.
- 5. Do not use this apparatus in or near water.
- 6. Clean only with a damp cloth.
- 7. Do not block any of the ventilation openings. Install in accordance with the Manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Do not place objects filled with water, such as a vase, on the apparatus.

- 16. The AC mains plug is used as the power disconnect device and it should remain readily accessible and operable during intended use. In order to completely disconnect the apparatus from power, the mains plug should be completely removed from the AC outlet socket.
- 17. Keep the cord out of heavy traffic areas. To avoid fire hazard, NEVER put the cord under rugs, near heat registers, radiators, stoves, or heaters.
- 18. DO NOT operate any generator with a damaged cord or plug, if motor fan fails to rotate, after the generator malfunctions, or if it has been dropped or damaged in any manner. Return generator to manufacturer or authorized repair facility for examination, electrical or mechanical adjustment, or repair.
- 19. Do not leave the generator in use unattended around those requiring close supervision.
- 20. WARNING! Always unplug the generator before moving it, cleaning, or whenever the generator is not in use. Be sure to pull by the plug and not the cord.
- 21. This Hydroxyl Generator is for Indoor Use Only.
- 22. Do not attempt to repair or adjust any electrical or mechanical functions on this unit other than the UV bulbs and Carbon Filters. Doing so will void your warranty. All servicing should be performed by qualified personnel only.
- 23. Do not place anything on top of generator.
- Do not plug the cord in with wet hands: electric shock could result.
- 25. NEVER use detergents, gasoline, glass cleaner, furniture polish, paint thinner or other household solvents to clean any part of the generator.
- 26. See separate safety instructions (pages 4 and 5) for replacing the UV Lamp with mercury.
- 27. For General Ventilating Use Only. Do Not Use to Exhaust Hazardous or Explosive Materials and Vapors.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Handling and Disposal of Mercury

Mercury is used in this device's UV bulb and must be disposed of properly. There is no safety hazard as long as the bulb is intact because the mercury is contained within the fixture. If a bulb breaks, very little mercury could be released. This is different then liquid metallic mercury (like in a thermometer), which is hazardous due to its potential to release mercury vapor. In humans, approximately 80% of inhaled mercury vapor is absorbed through the respiratory tract, where it enters the circulatory system and is distributed throughout the body. Short term exposure to this small amount of spilled mercury does not pose a health hazard, provided that the source of the mercury is removed promptly. Chronic exposure by inhalation, even at low concentrations in the range 0.7–42 µg/m3, can cause effects such as tremors, impaired cognitive skills, and sleep disturbance. The OHSA limit for occupational exposure of elemental mercury is 0.1 µg/m3. Mercury is used in most fluorescent light fixtures.

If the UV bulb does not function, the bulbs should be checked to ensure that they are intact. If the bulb is cracked, but not broken, it must be replaced. Cracked bulbs should be double sealed in plastic bags and disposed of according to local, approved procedures. If the bulb breaks and the mercury is spilled, clean-up must be done immediately according to the following procedure published by the Environment Protection Agency:

- People and pets must leave the room.
- DO NOT VACUUM. Vacuuming is not recommended unless broken glass remains after all other cleanup steps have been taken. Vacuuming could spread mercurycontaining powder or mercury vapor. Do not attempt to clean up the spill with a mop or broom either.
- Dispose of clothing, fabric, etc. that has come in contact with mercury; do not wash.
- Close the doors to the area of the spill and shut off the central forced air heating/air-conditioning system. Open exterior windows and direct room air out of the window with fans or use an exhaust fan (if the area is equipped with one) that vents directly outdoors.
- Cover shoes with disposable foot covers or wear shoes that will be disposed of.
- Remove jewelry as mercury can ruin them.
- Use a commercial mercury spill clean-up kit to remove the spilled mercury. If one is not available, you can also use Stiff cardboard, Sticky Tape, Damp Paper Towels, Disposable Wet Wipes and a Glass Jar with a Metal Lid or a Sealable Plastic Bag.
- Identify items in the spill area that can be cleaned and those that cannot. Non-porous surfaces (finished wood, plastic or concrete) can be cleaned following this guidance. Porous surfaces or fabric-covered items (upholstery, carpeting, stuffed animals, pillows, backpacks, unfinished wood, cork, cardboard) are difficult to clean because mercury beads may be trapped in these materials. If you decide you cannot clean these items, place them in plastic trash bags or cover or wrap them in a double layer of plastic and carefully seal with tape. Place the wrapped items in a secure place, preferably outdoors and out of the reach of children and pets. You should consult with a trained professional about how to decontaminate or dispose of these items safely.

- Wear gloves to carefully pick up the larger pieces of broken glass and what remains of the broken device and place them on a paper towel. Gently fold the paper towel around these pieces so you can pick the bundle up and place it in a zipper-type plastic bag. Use index cards or stiff cardboard to push smaller pieces of glass and mercury beads together into a pile. Shine a flashlight at an angle to locate beads of mercury. The beads will reflect light from the flashlight. Check for mercury in cracks or in hard-to-reach areas where beads may be hidden or trapped. Check a wide area beyond the spill.
- Use the eyedropper to collect mercury beads and place them in the plastic bag. Hold the eyedropper at an angle to draw the mercury into the tip. Keep the eyedropper at an angle to stop the mercury from rolling back out until you can put the mercury into the plastic bag. Wrap tape (sticky side out) around your gloved fingers and carefully use it to pick up any remaining glass or beads. Check again with the flashlight to be sure that no beads of mercury remain.
- At this point, mercury beads may still be trapped in cracks or crevices on irregular surfaces. Sprinkle sulfur powder over the contaminated area and rub it gently all over the surface and into the cracks with a paper towel. Sulfur powder binds with mercury. Use a paper towel dampened with water followed by wiping with another damp paper towel to clean up the sulfur and mercury. Place the used paper towels in a zipper-type plastic bag.
- Put all the items that were used to pick up the mercury, including index cards or cardboard, eyedropper, contaminated tape, paper towels, and zipper-type bags into the trash bag. Carefully remove rubber gloves by grabbing them at the wrist and pulling them inside out as they come off. Place the used gloves in the trash bag.
- Carefully seal the trash bag that contains the mercury contaminated waste and put it in a secure place, preferable outdoors and out of reach of children and pets until it can be disposed of safely.

Continued on the Next Page

Handling and Disposal of Mercury

- After cleaning, open a window and use a fan to ventilate the area to the outdoors for 24-48 hours before resuming normal use. Avoid blowing the exhaust back indoors or into other nearby residences.
- Clothes or shoes that did not come in direct contact with liquid mercury should be removed and put into the trash bag that was left outside the contaminated area at the beginning of the cleanup. Close the trash bag and take it outdoors. Carefully remove the shoes and or clothing from the trash bag and air them out thoroughly outdoors for 24 to 48 hours. After the outdoor airing, items that are washable can then be laundered.
- Continue to air out the room where the bulb was broken and leave the heating/air conditioning system shut off for several hours.

- Dispose of contaminated items properly! Mercurycontaminated items should not be placed in the regular household trash. Contact your town or county officials for information about hazardous waste disposal in your community.
- Call your local health department as soon as possible.
 If it is after-hours, please call your local fire department.
 If you have questions about potential health effects,
 you can call your physician, or your local poison control center at 1-800-222-1222.

FAQs

What are Hydroxyls?

Hydroxyl radicals quickly decompose chemicals in the air to keep the atmosphere clean of harmful compounds and are created naturally in the atmosphere when the sun's ultraviolet rays react with water vapor and oxygen. Hydroxyl generators like this one use the same UV radiation as the sun and are used to naturally clean and deodorize indoor environments.

Why is cleaning the air important?

Air pollutants can cause allergies, sick building syndrome (buildings with contaminants at harmful concentrations), bacteria infections, and spread viruses to name a few. Use of this unit will help reduce the chances of contracting one of these illnesses.

Is it safe to be around this generator when operating?

Unlike an Ozone Generator, the main benefit of using a hydroxyl generator is that they are safe to use in occupied areas for deodorization purposes. This is great as businesses do not have to shut down, people do not have to leave their dwellings, etc.

How much area will the Hydroxyl Generator cover?

This unit will cover approximately 2500 square feet.

How long does it take for hydroxyl deodorization or decontamination to work?

Deodorization can take just minutes into the start of machine operation. Naturally, other factors need to be taken into consideration such as the size of the layout, airflow, size, and the intensity of the problem. With odors, usually, a hydroxyl generator can permanently eradicate them within a few days.

Is humidity good or bad to have with this unit?

Good! The higher the treatment area's humidity, the more hydroxyls will be produced and the better/quicker the hydroxyl generator will do the job. Hydroxyls are not temperature sensitive and like higher humidity.

What maintenance is required?

Very little. Simply replace the UV lamps when they burn out (see page 9) and replace the carbon filters after approximately 60 days of use (see page 8). You can also clean as described on page 11.


Are there safety precautions to be observed?

Yes, see pages 2 to 5. Particularly, do NOT look directly at the UV light, this is very important.

How long is the warranty?

The is a limited time warranty of 2 years, see page 13 for specifics.

Location of Controls

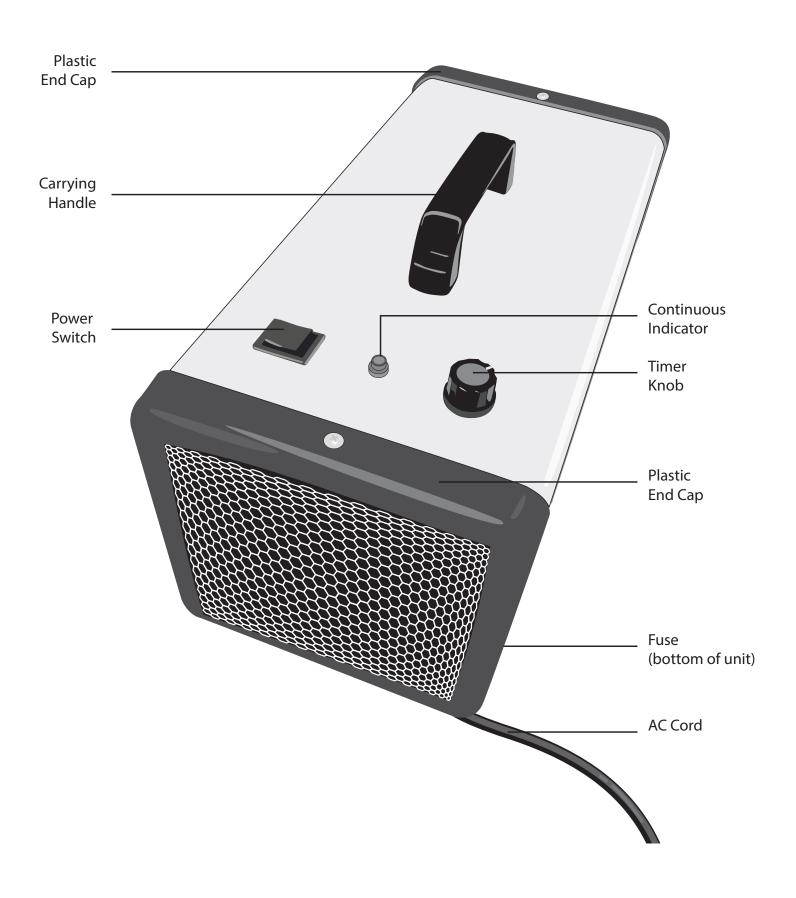


Operation

Standard Continuous Operation

1

Plug into properly installed and grounded three-prong outlet. See safety precautions as follows.

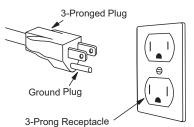

Grounding Instructions THIS APPLIANCE MUST BE GROUNDED.

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

- Plug into properly installed and grounded threeprong outlet.
- DO NOT remove ground prong.
- DO NOT use an adapter.

Power Supply

- Extension cords can be used only if:
 - (1) the marked electrical rating of the extension cord is at least as great as the electrical rating of the appliance,
 - (2) the extension cord must be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop.
- Press the Power Switch to the CONTINUOUS position; the Continuous indicator will light.



Timer Operation

- Plug the unit in as shown in step 1 in the previous section, Standard Continuous Operation.
- Set the desired timer time using Timer Knob. Note that the knob does not move as the unit is running.



Press the Power Switch to the TIMER position and the Hydroxyl Generator will operate until the set timer time is reached. Note the Continuous indicator will NOT light when in the timer mode.

When the timer time has been reached, the fan and UV bulbs will turn off.



Turning the Unit Off

To turn the unit off, press the Power Switch to the OFF (middle) position; the unit will stop operating.



Replacing the Carbon Filters

After approximately 60 days of use, both carbon filters should be replaced. The carbon filters are located at each end of the Hydroxyl Generator and can be purchased at www.ozoneexperts.com. Replace carbon filters as follows:


1

WITH THE UNIT UNPLUGGED, place the Hydroxyl Generator vertically with the controls facing up and remove the two retaining screws, one on each side of the Plastic End Cap.



Install the new carbon filter, then replace the screen and plastic end cap.




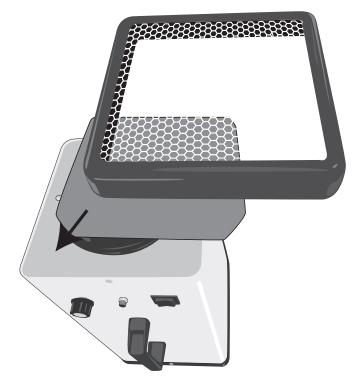

Gently remove the Plastic End Cap, screen and carbon filter. Place used carbon filter in a plastic bag and dispose of.



Re-insert the two screws.

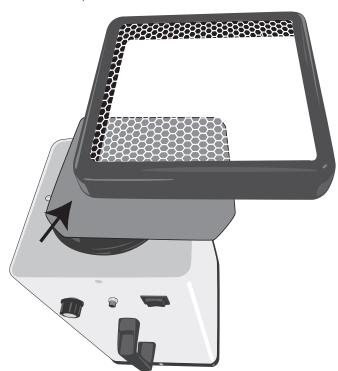



Repeat for the other carbon filter located on the opposite side.

IMPORTANT

The HG2500 should never be operated without the screen or carbon filter in place.

Replacing the UV Bulbs

When one of UV bulbs blows, you must replace both at the same time. The UV bulbs can be purchased from www.ozoneexperts.com. Replace UV bulbs as follows:

1

WITH THE UNIT UNPLUGGED, place the Hydroxyl Generator vertically with the controls facing up and remove the two retaining screws as shown, one on each side of the plastic end cap.



Remove one of the 8/32 screws holding the finger guard in its place and loosen the opposing screw. Rotate finger guard 180° so it is out of the way to access the UV Bulb area.






Gently remove the plastic end cap, screen and carbon filter.



4

Loosen both socket head screws using a 5/64 Allen key, then gently remove them by hand while securing the head socket.

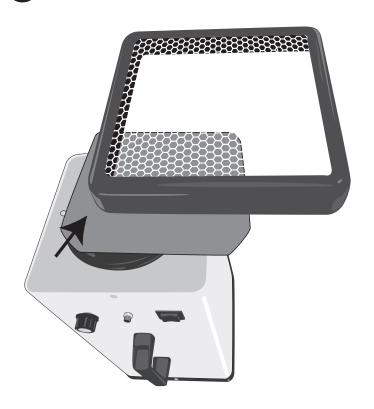




Replacing the UV Bulbs


5


Gently pull the UV lamp socket vertically holding the lamp by ceramic portion and disconnect the Quick Connect connector.



Reconnect the power supply, then reinsert socket head screws and gently tighten with 5/64 Allen key.

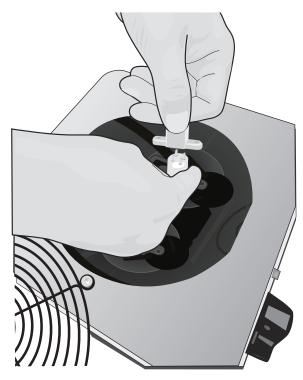




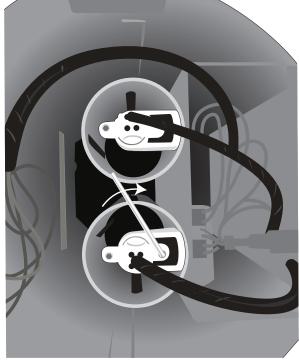

Repeat process with the second UV lamp as they should be replaced in pairs.



Rotate finger guard back in place and secure with retaining screw. Make sure both screws are gently secured.

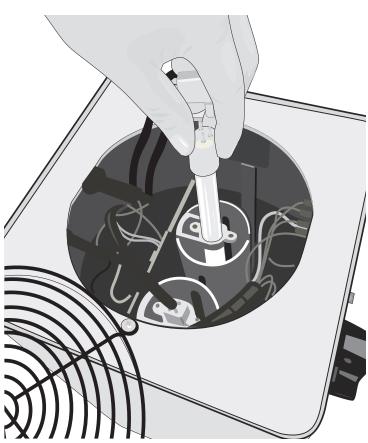




Replacing the UV Bulbs



Reinsert carbon filter, metal retaining screen, and plastic end cap, then secure with retaining screws.

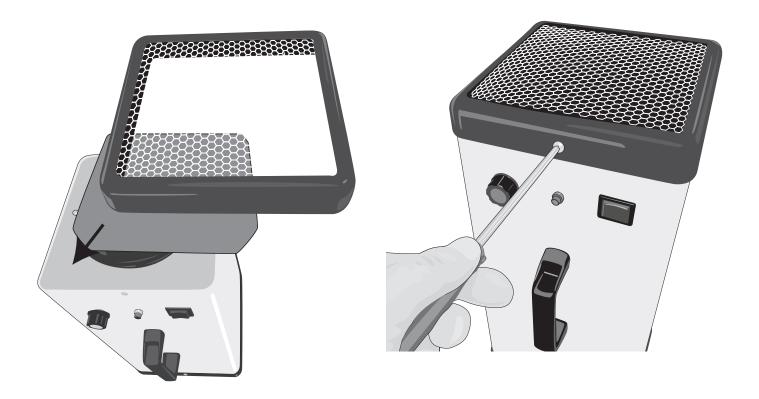

WARNING:

• UV Bulbs MUST be disposed of properly, see pages 4 and 5 for details on removing the mercury containing UV bulbs.

Cleaning

WARNING:

• Make sure the unit is unplugged before maintenance is performed.

Cleaning

To clean, use a damp soapy cloth for standard cleaning.

Replacement Parts

To order replacement parts, visit www.ozoneexperts.com

Specifications

Power Source	120 V, 60 Hz
Power Consumption	65 Watts
Fan Output	212 CFM
Treatment Process	UVC 254 NM germicidle chambers, UVC 254 nm germicidle chambers
UV Lamp Type	
Reaction Surface	
Room Capacity	2500 Square Feet
Dimensions	
Weight	9.5Lbs

Specifications subject to change without notice.

Troubleshooting

UV Lamps not functioning.

- The life of the UV bulb may have been met or damaged. If they are burnt out, replace both bulbs as shown on pages 9 to 11. If broken, refer to pages 4 and 5 for Handling and Disposal of Mercury.
- Internal Component failure; call 1-866-676-9663 for service.

Hydroxyl Generator is not performing well.

- The life of the carbon filter may have been met or damaged; replace both carbon filters, see page 8.
- The life of the UV bulb may have been met or damaged. If they are burnt out, replace both bulbs as shown on pages 9 to 11. If broken, refer to pages 4-5 for Handling and Disposal of Mercury.
- Internal Component failure; visit www.queenaire.com for service.

Hydroxyl Generator not working at all

- Unit is not plugged in, or power is not active at the AC socket.
- Fuse has blown. Unplug and turn over unit to access fuse. Rotate fuse holder and replace with 2 Amp fuse.
- Timer time is up. Press the Power switch to the OFF position and then to the TIMER or CONTINUOUS position.

Limited Warranty

PURCHASER PLEASE FILL OUT AND FAX TO 1-800-493-4550 OR MAIL TO:

QUEENAIRE TECHNOLOGIES, INC 9483 State Highway 37, Ogdensburg, NY 13669

MODEL #	_ SERIAL # _	DATE PURCHASED
PURCHASED FROM		INTENDED USE
CUSTOMER NAME		TELEPHONE
ADDRESS		FAX
CITY/STATE/ZIP		CONTACT NAME

QUEENAIRE TECHNOLOGIES, INC WARRANTS NEW QUEENAIRE MODELS TO THE ORIGINAL PURCHASER ONLY, TO BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP WHEN USED PROPERLY, FOR A PERIOD OF 5 YEARS FROM THE DATE OF ORIGINAL PURCHASE, CERAMIC GENERATOR PLATES ARE WARRANTED FOR SIX MONTHS AND ONLY AGAINST DEFECTS, NOT AGAINST BREAKAGE, EXCEPT AS NOTED IN THE POLICY BELOW, ANY REPAIR IS WARRANTED TO THE PURCHASER ONLY FOR THE LENGTH OF THE UNEXPIRED PORTION OF THE ORIGINAL WARRANTY.

THIS LIMITED WARRANTY APPLIES ONLY WITH RESPECT TO DEFECTS IN MATERIAL AND WORKMANSHIP UNDER NORMAL AND PROPER USE OF THE UNIT IN ITS UNMODIFIED CONDITION. THIS WARRANTY SHALL NOT APPLY TO ANY UNIT WHICH HAS BEEN SUBJECTED TO ALTERATION, MISUSE, NEGLIGENCE, OR ACCIDENT, OR DAMAGE RESULTING FROM IMPROPER SERVICE BY AN UNAUTHORIZED SERVICE REPAIR PERSON. WARRANTY SERVICE MAY ONLY BE PERFORMED BY AN AUTHORIZED WARRANTY REPAIR CENTER. AT THE TIME REQUEST FOR REPAIR IS MADE, EVIDENCE OF THE DATE OF PURCHASE AND DATES OF MAINTENANCE WORK MUST BE PROVIDED UPON REQUEST. TRANSPORTATION COSTS SHALL BE BORNE BY THE PURCHASER OF THE EQUIPMENT.

THE EXPRESS WARRANTY SET FORTH HEREIN IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALL SUCH IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY EXPRESSLY EXCLUDED AND DISCLAIMED, EXCEPT AS LIMITED IN ACCORDANCE WITH THE TERMS OF THE EXPRESS WARRANTY GRANTED HEREIN.

WITH EXCEPTION OF DAMAGES RESULTING FROM QUEENAIRE TECHNOLOGIES FAILURE TO COMPLY WITH ANY OBLIGATION UNDER FEDERAL OR STATE WARRANTY LAW, QUEENAIRE TECHNOLOGIES SHALL NOT BE LIABLE TO THE PURCHASER OR TO ANYONE ELSE FOR DAMAGES INCLUDING, BUT NOT LIMITED TO, CONSEQUENTIAL DAMAGES AND DAMAGES BY REASON OF INJURY TO ANY PERSON DUE TO ANY DEFECT IN OR THE MALFUNCTION OF THE UNIT OR ANY PART OR PARTS THEREOF, OR FOR ANY OTHER REASON. THIS WARRANTY GIVES CERTAIN LEGAL RIGHTS AND THE PURCHASER MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

NO SELLER OR DEALER FOR QUEENAIRE TECHNOLOGIES OR FOR THE UNIT, HAS ANY AUTHORITY TO MAKE ANY REPRESENTATION OR PROMISE ON BEHALF OF QUEENAIRE TECHNOLOGIES OR TO ASSUME ANY LIABILITY FOR QUEENAIRE TECHNOLOGIES, OR TO MODIFY THE TEXT OF THE WARRANTY PROVIDED HEREIN.

QUEENAIRE TECHNOLOGIES, INC
Toll Free: 1-866-676-9663 Toll Free Fax: 1-800-493-4550
www.queenaire.com



QUEENAIRE TECHNOLOGIES, INC 9483 State Highway 37 Ogdensburg, NY 13669

www.queenaire.com